

FLUKE®

802EN

Vibration Meter

Users Manual

(English)

June 2022

©2022 Fluke Corporation. All rights reserved.

Specifications are subject to change without notice.

All product names are trademarks of their respective companies.

LIMITED WARRANTY AND LIMITATION OF LIABILITY

Each Fluke product is warranted to be free from defects in material and workmanship under normal use and service. The warranty period is 1 year and begins on the date of shipment. Parts, product repairs, and services are warranted for 90 days. This warranty extends only to the original buyer or end-user customer of a Fluke authorized reseller, and does not apply to fuses, disposable batteries, or to any product which, in Fluke's opinion, has been misused, altered, neglected, contaminated, or damaged by accident or abnormal conditions of operation or handling. Fluke warrants that software will operate substantially in accordance with its functional specifications for 90 days and that it has been properly recorded on non-defective media. Fluke does not warrant that software will be error free or operate without interruption.

Fluke authorized resellers shall extend this warranty on new and unused products to end-user customers only but have no authority to extend a greater or different warranty on behalf of Fluke. Warranty support is available only if product is purchased through a Fluke authorized sales outlet or Buyer has paid the applicable international price. Fluke reserves the right to invoice Buyer for importation costs of repair/replacement parts when product purchased in one country is submitted for repair in another country.

Fluke's warranty obligation is limited, at Fluke's option, to refund of the purchase price, free of charge repair, or replacement of a defective product which is returned to a Fluke authorized service center within the warranty period.

To obtain warranty service, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that service center, with a description of the difficulty, postage and insurance prepaid (FOB Destination). Fluke assumes no risk for damage in transit. Following warranty repair, the product will be returned to Buyer, transportation prepaid (FOB Destination). If Fluke determines that failure was caused by neglect, misuse, contamination, alteration, accident, or abnormal condition of operation or handling, including overvoltage failures caused by use outside the product's specified rating, or normal wear and tear of mechanical components, Fluke will provide an estimate of repair costs and obtain authorization before commencing the work. Following repair, the product will be returned to the Buyer transportation prepaid and the Buyer will be billed for the repair and return transportation charges (FOB Shipping Point).

THIS WARRANTY IS BUYER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. FLUKE SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, ARISING FROM ANY CAUSE OR THEORY.

Since some countries or states do not allow limitation of the term of an implied warranty, or exclusion or limitation of incidental or consequential damages, the limitations and exclusions of this warranty may not apply to every buyer. If any provision of this Warranty is held invalid or unenforceable by a court or other decision-maker of competent jurisdiction, such holding will not affect the validity or enforceability of any other provision.

Fluke Corporation
P.O. Box 9090
Everett, WA 98206-9090
U.S.A.

Fluke Europe B.V.
P.O. Box 1186
5602 BD Eindhoven
The Netherlands

服务中心地址：
中国北京市朝阳区建国门外大街22号赛
特大厦2301室
邮编：100004
电话：010-65123435

Table of Contents

Title	Page
Introduction.....	1
Safety Information.....	1
Contact Fluke.....	1
Accessories.....	2
Specifications.....	2
Before You Start.....	4
Unpack and Inspect.....	4
Storage.....	4
Battery.....	4
Display.....	4
Controls and Connections.....	5
Power On/Off.....	7
Auto Power Off.....	7
How to Operate.....	7
Keys.....	7
Measurement Modes.....	7
Quick Measurement.....	7
Save Measurement Reading.....	8
View Memory.....	9
Clear All Data.....	9

802EN

Users Manual

Backlight.....	9
Flashlight.....	9
Accessory Connectors	10
External Sensor	10
Audio	12
ISO 10816 Standards.....	13
ISO 10816-1	13
Important Terms	14
General Maintenance	14
Care.....	14
How to Clean	14
Battery Replacement.....	15
How to Troubleshoot	16

Introduction

The 802EN Vibration Meter (the Product) is a screening tool for overall vibration measurements on machines. The Product includes these features:

- Acceleration, Velocity, and Displacement units of measure
- Auto data hold
- Stores 99 records (maximum)
- Audio output
- Flashlight
- External accelerometer support
- Passes 1-meter drop test
- Ships with a soft case

Safety Information

General Safety Information is in the printed Safety Information document that ships with the Product. More specific safety information is listed where applicable

Contact Fluke

Fluke Corporation operates worldwide. For local contact information, go to our website: www.fluke.com.

To register your product, or to view, print, or download the latest manual or manual supplement, go to our website.

Fluke Corporation
P.O. Box 9090
Everett WA 98206-9090
U.S.A.

中国北京市朝阳区酒仙桥路
6号院7号楼3层301单元
邮编: 100015

+1-425-446-5500

fluke-info@fluke.com

Accessories

Table 1 is a list of the accessories available for the Product.

Table 1. Accessories

Description	PN
Soft case	4106625
Battery door	4684258
Bottom cap	4684264

Specifications

Built-in Piezoelectric Accelerometer

Sensitivity (typical) 10.00 mV / m/s² ± 5 %
(1 g = 9.8 m/s²)

Measurement

Acceleration

Range 0.1 m/s² to 199.9 m/s²
Peak (rms • $\sqrt{2}$)

Resolution 0.1 m/s²

Accuracy ±(5 % + 2 digits)
(LO: 10 Hz to 1 kHz)
±(10 % + 5 digits)
(HI: 1 kHz to 10 kHz)

Velocity

Range 0.1 mm/s to 199.9 mm/s rms
Resolution 0.1 mm/s
Accuracy ±(5 % + 2 digits) (10 Hz to 1 kHz)

Displacement

Range 0.001 mm to 1.999 mm Peak-
Peak (rms • $2\sqrt{2}$)


Resolution 0.001 mm

Accuracy ±(5 % + 2 digits) (10 Hz to 1 kHz)

Piezoelectric Accelerometer

Typical

Frequency Response 10 Hz to 15 kHz

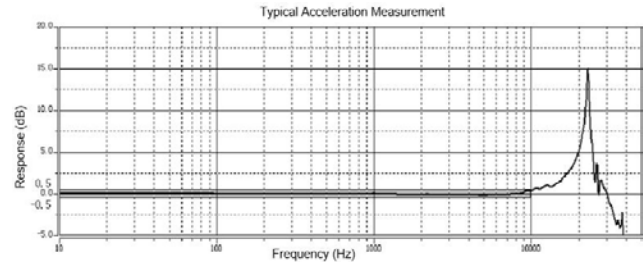

hyt011.jpg

Amplitude Units

- Acceleration.....g, m/s²
- Velocity.....mm/s
- Displacementmm
- Battery Type.....2 AAA, IEC LR03

External Piezoelectric Accelerometer

- DC Bias Voltage6 V dc to 7 V dc
- DC Bias Current3.5 mA

Note

Other specifications are the same as those of the built-in piezoelectric accelerometer.

- Battery Life.....25 hours
- Size (L x W x H)24.1 cm x 7.1 cm x 5.8 cm
- Weight.....220 g
- Audio Port.....Stereo Audio Output Jack
(3.5 mm Audio Plug)
- External Sensor Port.....M12 connector

Environmental

- Operating Temperature.....-10 °C to 50 °C
- Storage Temperature.....-30 °C to 60 °C
- Operating Humidity30 % to 90 % (non-condensing)
- Operating Altitude2000 m
- Storage Altitude12 000 m
- IP RatingIP 40

- Vibration Limit.....500.0 m/s² peak

Electromagnetic Compatibility

- International.....IEC 61326-1: Portable
Electromagnetic Environment
- CISPR 11Group 1, Class A

Group 1: Equipment has intentionally generated and/or uses conductively-coupled radio frequency energy that is necessary for the internal function of the equipment itself.

Class A: Equipment is suitable for use in all establishments other than domestic and those directly connected to a low-voltage power supply network that supplies buildings used for domestic purposes. There may be potential difficulties in ensuring electromagnetic compatibility in other environments due to conducted and radiated disturbances. Emissions that exceed the levels required by CISPR 11 can occur when the equipment is connected to a test object. The equipment may not meet the immunity requirements of this standard when test leads and/or test probes are connected.

- Korea (KCC)Class A Equipment (Industrial
Broadcasting & Communication
Equipment)

Class A: Equipment meets requirements for industrial electromagnetic wave equipment and the seller or user should take notice of it. This equipment is intended for use in business environments and not to be used in homes.

Before You Start

This section helps you to know the Product parts, controls, and connections.

Unpack and Inspect

Carefully unpack and inspect the:


- Vibration Meter
- Soft case
- Quick Reference Guide
- 2 AAA, IEC LR03

Storage

When not in use, always keep the Product in the supplied soft case. The custom interior of the case supplies protection for the Product, documentation, and accessories.

Battery

Before you use the Product for the first time, install the two AAA Alkaline batteries (included). See [Battery Replacement](#) for more information.

 shows on the display when battery power is low. Replace the batteries before you continue to use the Product.

Display

[Table 2](#) shows the typical elements on the Product display.

Table 2. Typical Elements on the Product Display

Item	Description
①	Battery status
②	Save reading
③	Hold reading
④	Measurement units
⑤	LF/HF switch
⑥	External sensor
⑦	Record storage


Controls and Connections

Table 3 shows the location of the controls and connections for the Product.

Table 3. Product Controls and Connections

Item	Control
①	LCD
②	Power on/off
③	Measure
④	Save/mode switch/unit switch
⑤	Bottom cap
⑥	View records
⑦	Backlight on/off and flashlight on/off
⑧	Flashlight
⑨	Piezoelectric Accelerometer
⑩	Audio port
⑪	External sensor port

Power On/Off

Push and hold  for over one second to turn on/off the Product. See [Table 3](#) for the control location.

When you turn on the Product, the default Measurement screen shows. The screen shows the same measurement units since you last powered off the Product.

Auto Power Off

After 300 seconds of inactivity, the Product automatically powers off.



How to Operate


This section is about the operation of the Product. It includes measurement tips and step-by-step instructions.

Keys

[Table 3](#) shows the keys on the Product.

For general operation:


- Push and hold  to start measurement or release reading hold.
- Push  to change measurement mode/unit or record a reading.

- Push  to view existing reading or clear all stored data.

Measurement Modes

The units of measure are adjustable for different standards.

In standby mode (when the main screen shows ----):


Push  to switch between measurement modes (acceleration/velocity/displacement) and measurement units (LO m/s², Hi m/s², mm/s, and mm).

Quick Measurement

Note

Push the sensor tip onto the test surface vertically. Otherwise measurement accuracy is affected. See [Figure 1](#).

Figure 1. Correct and Incorrect Measurement Angles

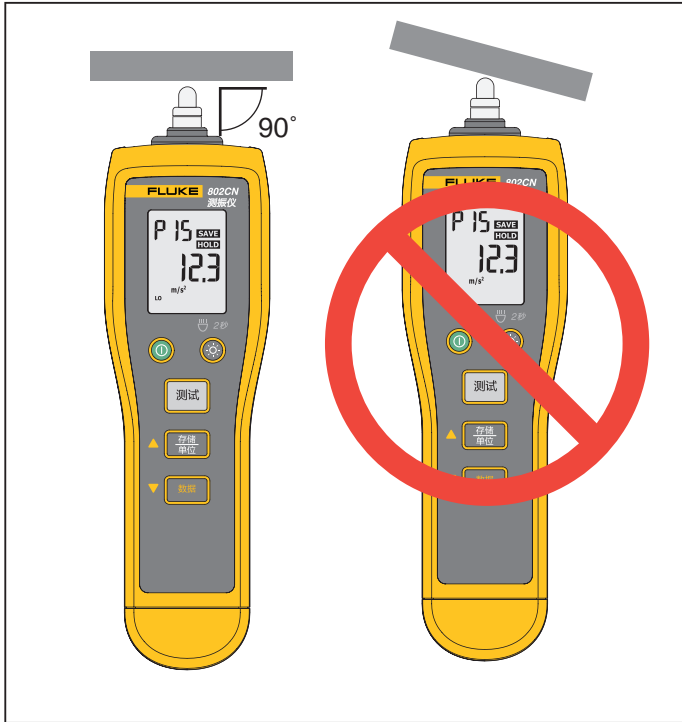

After startup, the Product is in standby mode. The main screen shows "----" and the last set measurement unit.

1. Push and hold **MEASURE** to enter measurement mode and view measurement reading.
2. When the reading is stable, release **MEASURE**. The reading is automatically held. The screen shows HOLD and flashes SAVE, reminding you to save the reading.
3. Push **MEASURE** again to switch to the main screen in standby mode.

Note

The Product cannot measure frequency, because the vibration frequency is unknown. Change the measurement mode between LO and HI. If the two readings are different, use the greater reading to determine the vibration status.

Save Measurement Reading

After the measurement is completed, the measurement reading is automatically held. The screen flashes SAVE.

Push **SAVE UNITS** to save the reading. SAVE no longer flashes on the screen. Instead, the memory location shows on the upper-left of the screen. Quick measurements are saved as sequential files that start at 01. For example, P03 means the reading is saved in the 3rd file.

A maximum of 99 measurement readings can be stored in the memory. When the memory is full, the Product automatically deletes the earliest reading.

View Memory

When the Product is on:

1. Push **MEMORY** to enter View Memory mode. The screen shows the latest stored position.
2. Push **SAVE UNITS** to switch to the last stored position.
3. Push **MEMORY** to switch to the next stored position.
4. Push **MEASURE** to switch to Measurement mode.

The last viewed storage position is automatically saved and will be shown when you enter View Memory mode next time.

5. Push and hold **SAVE UNITS** for more than one second to view the last stored reading.

Clear All Data

In View Memory mode, push and hold **MEMORY** for over 5 seconds to clear all stored data.


Backlight

When the Product is on, push  to turn on/off the backlight.

Note

The backlight automatically turns off after 120 seconds of inactivity.


Flashlight

The Product has a built-in flashlight to illuminate the measurement area on the machine. Push and hold  for 2 seconds to turn on or turn off the flashlight. See [Figure 2](#).

Note

The flashlight automatically turns off after 120 seconds of inactivity.

Figure 2. Flashlight

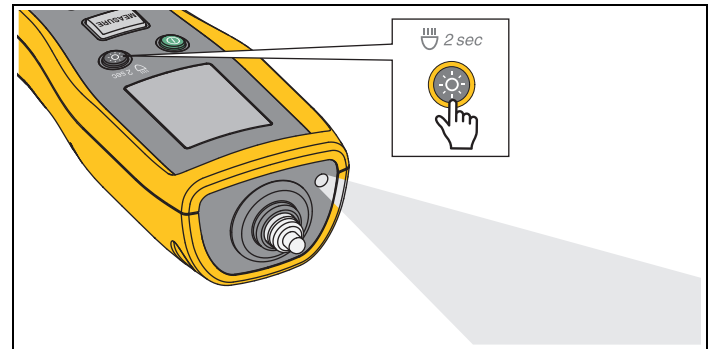

Accessory Connectors

The Product has two accessory connectors:

- External Sensor
- Audio


External Sensor

In addition to the built-in piezoelectric accelerometer, an optional external sensor connects to the Product. The connector type for the external sensor is a Subminiature version B (SMB). **Figure 3** shows how to connect an external sensor to the Product.

Note

The Product supports but does not provide an external accelerometer. Go to <http://www.fluke.com.cn/> to purchase an external accelerometer.

Figure 3. External Accelerometer

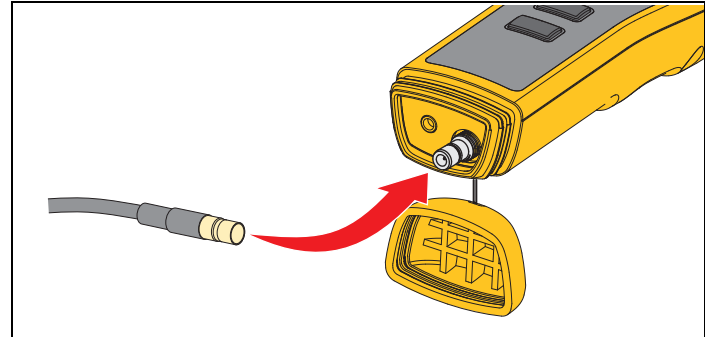


Note

*When the external sensor is connected to the Product, the screen shows ACCY after you push and hold **MEASURE** for 2 seconds. This means the external sensor is working and the built-in sensor is automatically turned off.*

To set the sensitivity for the external sensor:

1. Turn on the Product while pushing **MEASURE** at the same time.

The screen shows the model number and software version number.

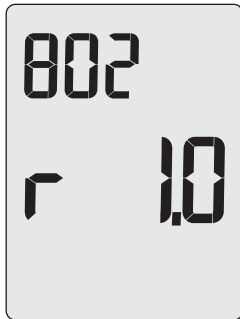

2. Push **MEASURE** again to enter the sensitivity setting.

The screen below shows that the initial value is 10.00, which means 10.00 mV/m/s².



Note

You must set the sensitivity in mV/m/s² units.

3. Push **▲** (**SAVE UNITS**) or **▼** (**MEMORY**) to enter setting mode. 10.00 flashes.
4. In setting mode (when the reading flashes), push **▲** to increase 0.01, or push **▼** to decrease 0.01. The unit is mV/m/s².
5. When you get the required sensitivity, push **MEASURE** to save the setting and exit setting mode.

Note

The external sensor can be purchased separately. Set the sensitivity according to the reference data that is shipped with the external sensor.

Audio

The Product has an audio connector for headphones. Headphones are useful to detect unusual machine sounds.


To listen to a machine:

1. Open the bottom cap of the Product and connect the audio connector.
2. Put on the earphones.
3. Push the sensor tip onto the test surface.
4. Push and continue to hold **MEASURE**.

As you continue to hold **MEASURE**, the audio channel is active. The Product also takes a measurement at this time.

Figure 4 shows the audio connection to the Product.

Figure 4. Audio Connection

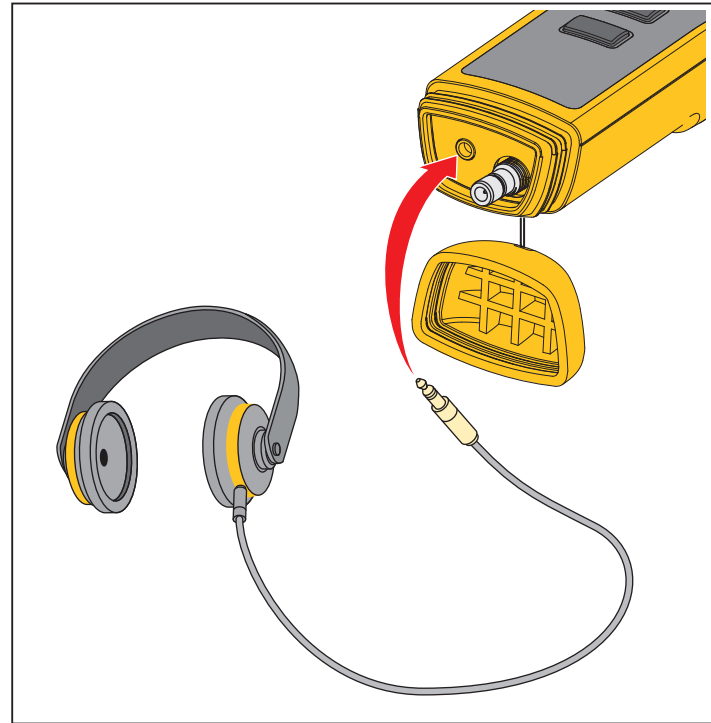

ISO 10816 Standards

As an alternative to the Overall Vibration Severity Scale included in the Product, you can use the ISO Standard 10816-1 to evaluate the severity of overall vibration levels. [Table 4](#) is a chart that contains the values from this standard. Compare the overall vibration value measured with the Product to this table to identify the vibration severity.

Table 4. Vibration Severity - ISO 10816-1

Machine		Class I	Class II	Class III	Class IV
		Small Machines	Medium Machines	Large Rigid Foundation	Large Soft Foundation
Vibration Velocity Vrms	mm/s				
	0.28				
	0.45				
	0.71	GOOD			
	1.12				
	1.80				
	2.80	SATISFACTORY			
	4.50				
	7.10	UNSATISFACTORY			
	11.20				
	18.00				
	28.00	UNACCEPTABLE			
	45.9				

ISO 10816-1

This standard contains general guidelines for machine vibration measurements on non-rotating parts.

Important Terms

Class I: Individual parts of engines and machines integrally connected to the machine in normal operation. Production electrical motors at a maximum of 15 kW are examples of machines in this category.

Class II: Medium-sized machines (typically electrical motors with 15 kW to 75 kW output) without special foundations, rigidly mounted engines or machines (up to 300 kW) on special foundations.

Class III: Large prime-movers and other large machines with rotating masses mounted on rigid and heavy foundations that are relatively stiff in the direction of the vibration measurements.

Class IV: Large prime-movers and other large machines with rotating masses mounted on foundations that are relatively soft in the direction of vibration measurements (for example, turbo generator sets and gas turbines with outputs greater than 10 MW).

General Maintenance

Maintenance is not necessary for the Product.

Caution

**No part of the Product is serviceable by the user.
Do not try to open the Product.**

Caution

To prevent damage to the Product or any performance loss, do not put the Product in temperature extremes. The ambient operating temperature is -10 °C to 50 °C with a humidity of 30 % to 90 % RH (non-condensing).

Care

Caution

To prevent damage to the piezoelectric accelerometer, do not hit, shake, or drop the Product. A damaged sensor decreases the diagnostic quality.

How to Clean

Clean the external case of the Product at regular intervals with a moist cloth and a weak detergent solution.

Caution

To prevent damage or performance loss, keep the Product dry. Do not put the Product into any liquid. The Product is not waterproof.


Battery Replacement

The Product operates on two AAA batteries.

To replace the batteries:

1. Turn the Product over and loosen the battery cover screw.
2. Remove the battery cover from the Product, see [Figure 5](#).
3. Align the batteries into the battery slot with the correct polarity.
4. Replace the battery cover and tighten the screw.

Figure 5. Battery Replacement

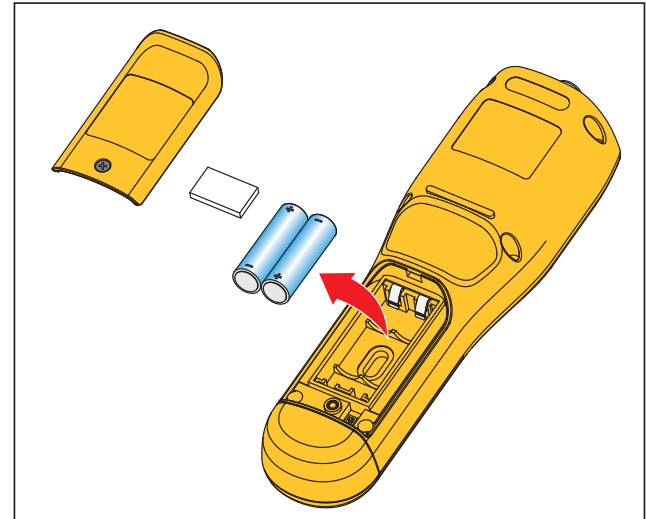

How to Troubleshoot

Table 5 is a list of problems, causes, and corrective actions for the Product.

Table 5. Troubleshooting

Symptom	Cause	Corrective Action
The Product does not turn on.	The battery voltage is too low. The battery connection is loose.	<ol style="list-style-type: none"> 1. Replace the batteries. See Battery Replacement. 2. Make sure the batteries are properly aligned and secured. 3. If the problem continues, contact the Fluke Service Center^[1] for technical support.
Buttons do not operate. Product does not operate.		<ol style="list-style-type: none"> 1. Restart the Product. 2. If the problem continues, contact the Fluke Service Center^[1] for technical support.
[1] See Contact Fluke		